




Microswitch

Order code	Picture	Description	Comments
6099.00.035		KS 25 B4	Microswitch
6099.00.036		KS 26 B4	Microswitch Contact gold (Au 4...6 µm), with connector
6099.00.039		KS 25 F4	Microswitch
6099.00.040		KS 26 F4	Microswitch Contact gold (Au 4...6 µm), with Pin
6099.00.576		KS 36 B11	Microswitch Contact gold (Au 4...6 µm)
6099.00.578		KS 36 B12	Microswitch Contact gold (Au 4...6 µm)

Microswitch

Order code	Picture	Description	Comments
6099.00.573		KS 36 F10	Microswitch Contact gold (Au 4...6 µm)
6099.00.575		KS 36 F11	Microswitch Contact gold (Au 4...6 µm)
6099.00.577		KS 36 F12	Microswitch Contact gold (Au 4...6 µm)
6099.00.928		KS 25 B4	incl. security screw
6099.07.572		XCC4.S1	Microswitch Contact silver (Ag), 2A 250V AC, Snap action switch incl mounting plate
6099.07.685		XCC4.81.S1	Microswitch Contact gold (Au)

Microswitch

Order code	Picture	Description	Comments
6099.00.452		XCC3.WL1	Microswitch Contact silver (Ag), 1A 250V AC, Mikroswitch with simulated V-lever
6099.00.688		XCC4.81L1	Microswitch Contact gold (Au)
0483.04.009		XGK2.S20	Microswitch Contact silver (Ag), 16A 250 V AC, Mikroswitch with roller lever
0483.04.002		S845.V1020	Microswitch Contact gold (Au)
6099.20.698		S845.V1020	Microswitch Contact gold (Au), Mikroswitch with roller lever incl mounting plate
0483.04.001		BVM3.FYR	Microswitch Contact silver (Ag), 10A 250 V AC, Mikroswitch with direct positiv opening contact
6099.00.564		KS 35 C10	Microswitch with protection cover